

Installing Lumistar Programs on Windows 10 (x64)

Download Install programs from:

<http://lumi-star.com/software-products-tools/>

The preferred program installation order is:

- 1) **setup-LDPS_8x_8.9510_W10x64.exe**
- 2) **setup-DynaSim_1.4704_W10x64.exe**
- 3) **Setup-LRRS_3x_1.8003_W10x64.exe**


Note: Program versions later than those listed above are acceptable.

If you aren't installing all of the above programs, then install the ones you need - lower numbers first.

Rule: Never Click a **Restart** Button before an installer shows the **Finish** Button and an **Open readme file** CheckBox.

If you are loading all programs at the same time, don't Restart the computer between running installers as **Administrator**. Restart the computer after the last Installer completes. Configure the programs after Restart.

Note: If you loaded **3)** before **1)** and/or **2)** you will likely encounter the following Warning when installing **1)** and/or **2)**:

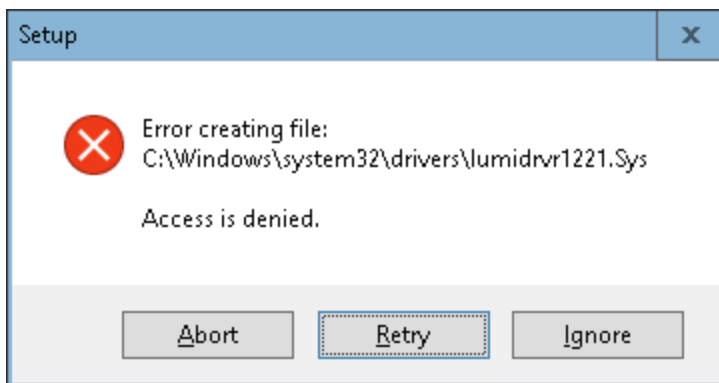

Click **Ignore** and proceed with the Installation. Restart the Computer after finishing all remaining programs are installed.

Note: For now to update to the latest Archiving .dll that optimizes recording, download the **Install_New_ArcDll_Ldps8x.zip** file, unzip and execute the **Install_New_ArcDll_Ldps8x.bat** file.

Warning: Using **Programs and Features** to uninstall **any** Lumistar will remove required Lumistar drivers and Signatures, rendering all remaining Lumistar programs inoperable. Reinstalling **1)** will covers **1), 2)** & **3)**, **2)** covers **2)** & **3)**, **3)** covers only **3)**.